



OREX BRAKE DRUM TECHNICAL MAINTENANCE BULLETIN

In order to maximize the service life of your OREX brake drum, proper installation, periodic inspection, and maintenance procedures must be followed. The information contained in this manual will help in establishing a brake drum maintenance program that will help you spot problems and take the necessary corrective measures to restore balanced braking and ensure safe, reliable brake system performance.

Consistent, reliable brake system performance is dependent on a sound brake system maintenance program. It is important that regularly scheduled inspections of the brake system are incorporated into your preventative maintenance program. By incorporating a regular brake inspection program your cost-per-kilometer will be significantly reduced. Costly downtime can be reduced by spotting problems before they take a vehicle out of service for extended periods of time.

While there is no specific recommended timetable for brake system inspection, we recommend that you establish a regular and thorough inspection procedure to ensure consistent, reliable brake performance. Following are some of the more common problems encountered during regular brake drum inspection and the recommended procedures for correcting the problem.

CRACKED DRUMS

Upon inspecting the drum, a crack extending through the entire wall is found. This condition is caused by excessive heating and cooling of the brake drum during operation. If this condition is found, the drum **MUST** be replaced immediately. Repeated cracking of brake drums may indicate that the brake system and/or the brake drums are inadequate for the particular application. This condition may also indicate driver abuse, particularly if the drums, lining, and brake system are correctly rated for the vehicle and the application. If this problem occurs, the brake system should be checked for proper brake system balance and proper brake lining friction ratings as recommended by the OEM. If this problem occurs on a new drum, cause may be from mishandling.




HEAT-CHECKING

Heat-checking is the appearance of numerous short, fine, hairline cracks on the braking surface of the drum. Heat-checking is a normal condition found on brake drums and is caused by the constant heating and cooling of the braking surface, which occurs as the brakes are applied during normal operation of the vehicle. Heat-checks will frequently wear away and form as a result of the normal braking process however, heat-checks can progress over time into cracks in the braking surface depending on such factors as lining wear rate, brake system balance, and how hard the brakes are used. Normal heat-checking does not impair braking performance; however, it is advisable to make sure, that deep cracks have not developed. Replace the brake drum if any of the following conditions are found: heat checks, one or more that extend completely across the brake surface. Heat check cracks that are 1.50mm wide and/or 3mm deep or greater.



SCORED DRUMS

This problem is indicated by a defined, grooved appearance on the braking surface of the drum and excessive lining wear. If the scoring is severe it is advisable to check the brake system to determine if there are excessive amounts of abrasive material entering and building up on the braking surface of the drum. The system should be checked for lightly dragging brake(s). The linings should also be checked to make sure that they have the correct friction rating.

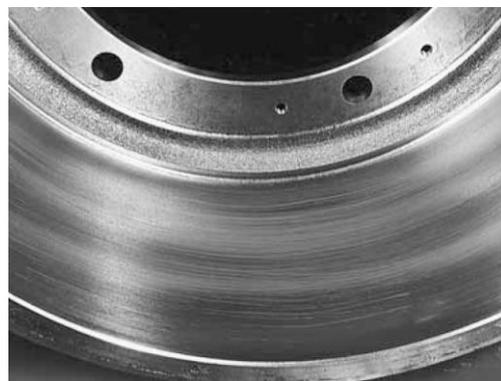

NOTE: IT IS A RECOMMENDED PROCEDURE TO SAND THE BRAKING SURFACE OF THE DRUM AT THE TIME OF RELINING.

GREASE-STAINED DRUMS

If this condition exists, the brake drum will show discolored spots on the braking surface, with oil and/or grease spattered on the brake assembly. This condition is most likely caused by a faulty lubrication system or improper greasing of the brake cams. To correct the problem, the source of the grease and/or oil must be located and necessary repairs made to eliminate the leak. Remove the entire brake assembly and clean each component thoroughly. If the linings are soaked with oil or grease they must be replaced.



BLUE DRUMS

A drum which shows the signs of bluing has been subjected to extremely high temperatures. This condition may be caused by continued hard stops, by brake system imbalance, or improperly functioning brake hardware components. It is not necessary to resurface or replace the drum as long as it remains within the allowable tolerance for operation. To correct this problem the brake system should be checked for proper balance. The return springs should be checked to determine if they are weak or broken. The brake should be checked for proper adjustment and clearance. If this condition is left unresolved, it can result in the development of a martensite condition or cause the drum to crack.



MARTENSITE SPOTTED DRUMS

This problem may be indicated by hard, slightly raised dark coloured spots on the braking surface with uneven wear. This problem may also be indicated by a pulsating ride upon brake application or excessive noise upon braking. This condition indicates that the drum has been subjected to extremely high temperatures caused by an improperly balanced braking system, a dragging brake, or continued severe brake applications. These extremely high temperatures have caused structural changes to occur in the drum material which makes the drum more susceptible to cracking. If this condition exists, the drum must be replaced. The brake linings should be checked for uneven wear and replaced if necessary. After replacing the brake drum, the entire braking system should be checked for proper balance between the tractor and the trailer as well as wheel to wheel (i.e., air distribution, brake adjustment, and power A/L factors).



POLISHED DRUMS

A polished drum can be identified by the mirror-like finish on the braking surface. This problem can easily be solved by sanding the braking surface with 80 grit emery cloth. It is also necessary to remove the glaze from the linings at the same time using the 80-grit emery cloth.

The brake system should be checked for lightly dragging brake(s). The lining should also be checked to make sure that they have the correct friction rated brake linings suitable for the environment the vehicle is operating.



EXCESSIVE WEAR

If excessive wear occurs along the edges of the lining contact area of the braking surface or in areas coinciding with the lining rivet holes, the system should be checked to make sure that there is not an abnormal build-up of abrasive material. The most common cause of this problem is the build-up of abrasive material from either the presence or absence of dust shields depending on the application of the vehicle. If the problem occurs while dust shields are installed, remove the lower dust shield to allow abrasive materials to more readily exit the braking system.



WORN MOUNTING SURFACE

Rounding over of the drum-mounting surface is caused by continued operation with a loose wheel assembly. If this condition is left uncorrected it will cause the wheel bolts to break resulting in wheel-end failure and the loss of the wheel assembly. To check for this condition, use a straight edge and a feeler gage as shown. If the wear exceeds .762mm, the drum must be replaced along with all wheel bolts in the assembly.



OUT-OF-ROUND DRUMS

This condition exists when the drum diameter shows variations at different points around the braking surface and the brake linings exhibit more wear on one side than the other. This distortion of the drum as a result of excessive heat generated during brake applications or as a result of improper drum storage techniques (see proper drum storage recommendations on page 5 of this manual). Other possible causes for this condition could be the result of dropping the drum on a hard surface during routine wheel-end maintenance. If the diameter of the drums braking surface is within allowable limitations (see note below), the drum can be machined to restore concentricity. If the drum diameter is past the recommended limitations, the drum **MUST** be replaced.



OVERSIZED (WORN) DRUMS

This condition is indicated by either excessive wear at the lip (outer edge of the drum) or improper lining to drum contact during brake application. To check, use a drum gage as shown to measure the diameter of the drum at least 25mm from the lip or outer edge of the braking surface. If the measurements exceed the allowable limitations, the drum **MUST** be replaced and new linings should be installed.



IMPROPER APPLICATION OF BRAKE DRUM

Linings protruding past the braking surface:

This condition can be identified by visually inspecting the brake assembly for evidence of the lining protruding past the outer edge of the braking surface as shown at left. If this condition exists, check the hub application specifications to determine the proper drum for the application and replace the drum and install new linings if the old linings are damaged.



Broken mounting ring:

This problem can be identified by the presence of fractures or cracks around the bolt circle or mounting surface of the drum. This condition is caused by interference between the hub and drum-mounting surface due to improper seating of the drum on the hub pilot during installation or by installing a drum with a mounting ring diameter smaller than the hub pilot diameter. If this condition is present, the drum **MUST** be replaced. Check the application specifications to determine the proper drum for the application before attempting to install a replacement drum.



Radial cracking of the bolt holes on the mount surface:

This condition is caused by interference between the hub and drum-mounting surface during installation as a result of using the wrong drum for the application or improperly cleaning the hub piloting surface prior to drum installation. If this condition exists, the drum **MUST** be replaced. Check the application specifications to determine the proper drum for the application before attempting to install a replacement drum. Before attempting to re-install another brake drum, visually inspect the hub-piloting surface and make sure that all dirt and corrosion are properly removed.



Also, take care when installing the drum to make sure that the drum-mounting surface is properly and evenly seated against the hub mounting surface before torquing the wheel nuts during re-assembly.

PROPER SELECTION of NEW DRUMS

When replacing a worn-out or damaged drum, certain procedures should be followed to ensure that you choose the right replacement drum and that it is installed properly. Brake compatibility is extremely important in that each brake on the vehicle must perform equally to effectively produce a balanced and controlled stop.

Proper Matching of Brake Assemblies Will

- Maximize your brakes stopping performance
- Provide longer service life between overhauls
- Minimize brake maintenance costs

Proper Brake Drum Selection is Key to Maintaining Optimum Brake System Performance

When specifying replacement brake drums, the following information will be required:

- The manufacturer's name
- The manufacturer's part number
- A description of any other markings appearing on the outer drum surface.

In the event the information on the previous page is not available, the following information will be required in order to determine the proper brake drum for your vehicle:

- Name of the vehicle manufacturer
- Model of the vehicle
- Manufacturer and model number of the axle
- Manufacturer and model number of the associated wheel and hub
- Brake size and type of actuation (S-Cam, Wedge, Air, or Hydraulic)
- Both ends of a common axle **MUST** be in the same state of repair. If the brake shoes on one end are replaced, the shoes on the other end should also be replaced. If one drum on an axle is replaced, the other drum should also be replaced to maintain consistent braking performance.

SIZING A BRAKE DRUM

If the information previously described is not available, it will be necessary to make accurate measurements and gather the information as described in steps 1 through 7 on the following page.

1. Braking surface diameter



2. Width of braking surface



3. Overall depth of the drum



4. Pilot diameter



5. Bolt circle diameter



6. #, size & location of bolt holes



PROPER STORAGE of COMMERCIAL VEHICLE BRAKE DRUMS

Many fleets maintain an inventory of heavy-duty brake drums for routine replacement. The proper storage and handling of these drums will ensure optimum performance and longer service life.

Correct Storage Method:

Drums should be stored in an area free from excess moisture and stacked as shown in Figure 1, to ensure proper distribution of weight on the sidewalls of the drum. Properly stacking new drums will avoid distortion of the sidewalls or damage to the braking surface.



FIG 1

Incorrect Storage Method:

Storing brake drums by “nesting” one drum on another as shown in Figure 2, will result in damage to the drums. Storing drums in any of these ways will cause an out-of-round condition to occur which will require machining to restore concentricity before installation.



FIG 2

FACTORY BALANCED BRAKE DRUMS

OREX brake drums are factory balanced and dynamically machined-to-balance to 200gms specifications and will provide identical braking performance across all axle configurations.

How to Properly Install an Outboard Mounted Brake Drum

The following steps will help one to ensure that a drum is properly mounted and will not slip off the drum pilot when mounting the wheels.



1. Position the hub pilots to be in the 12 o'clock location as shown. **Note: It is very important to make sure that the pilots are clean and free from rust or any other foreign material.**



2. Making sure that the drum is mounted onto the drum pilot and the drum flange is flush against the hub flange, hold in on the bottom of the drum and adjust the brake lining until the lining touches the drum. This will hold the drum in place until the wheels are mounted.

3. Proceed with mounting the wheels and torque to proper specifications. **Do not forget to properly adjust the brakes.**



4. The picture on the left shows a drum that has slipped off the drum pilot, see the figure below for proper mounting.

5. The picture on the right shows a drum properly mounted onto the drum pilot.



OREX brake drums have standardized the drum mounting bolt hole sizes on outboard mounted drums. The OREX brake drum to suit 5 & 6 stud hubs can be fitted to either axle.

In some applications, where smaller studs are used, a clearance may exist between the bolt hole diameter and the stud. This condition is not a problem because the drum will be centered by the hub pilot and will be held in place when the wheel is torqued against the drum. When the proper mounting hardware is used and the recommended wheel torque (shown in the chart on pg. 9) are maintained, the drum will be held securely in place.

Figure 6 - Improper installation, drum is cocked and not properly seated on the drum pilot of the hub. Unlike traditional cast iron hubs, the surface on the drum pilot of an aluminum hub is susceptible to damage if the drum is not properly seated during the installation process. If the drum is improperly installed and allowed to rest on the wheel pilot, the drum pilot surface will be damaged when the assembly is torqued down. This will not allow the drum to properly seat, resulting in damage to the hub and may also result in a dragging brake condition. (See Figures 6 & 7 below)



FIG 6

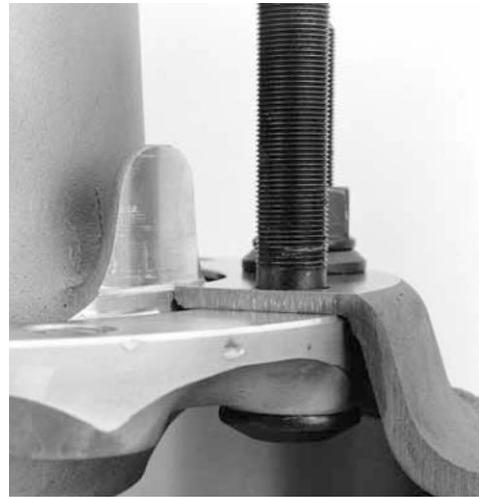


FIG 7

TROUBLE SHOOTING – DRIVER COMPLAINTS

In some instances, drivers may complain of braking irregularities between normal or routine brake system inspections. The following list is comprised of some of the more common driver complaints, the cause, and the action required to solve the problem. Should driver complaints arise, it is advisable to inspect the braking system at the earliest possible time.

<p>Driver Complaint Common Cause Solution Driver complains of pulsating ride or excessive vibration during normal operation of the vehicle.</p>	<p>This problem may be caused by any one of or, a combination of, the following problems: Suspension, wheel base, cab mounting, frame, out-of-round tires and/or wheels; out-off-balance tire, wheel, brake drum, or hub. Improper mounting of hub piloted drum. Worn mounting surface on the drum as a result of loose wheel assembly.</p>	<p>If it is determined that the problem results from an unbalanced brake drum or wheel, the component can be balanced in the field or a new replacement part may be ordered from the factory pre-balanced. If the exterior of the drum is covered with rust, scale, dirt, tar or other foreign material, remove with a wire brush and clean with kerosene. Then wipe and thoroughly dry the drum before reinstallation. If the drum has been improperly mounted on the hub pilot, remove and check the hub and drum for any damage. Reinstall the drum properly.</p>
<p>Driver complains of excessive fade. Braking power diminished or is completely lost during brake application.</p>	<p>Any brake lining will eventually fade when subjected to high temperatures, such as instances of repeated quick stops from high speeds or during long periods of downhill braking. This problem can be caused by inferior linings which may suffer some chemical breakdown under extended periods of high temperature. A high-quality brake lining will fade gradually allowing the driver time to increase braking pressure and maintain control of the vehicle. Excessive fade can also be caused by drums which expand to the point of maximum shoe travel during extended periods of excessive heat. This reduction of contact between lining and braking surface results in a loss of braking power.</p>	<p>When excessive fading occurs, the braking system should be checked for one or more of the following problems: Check the braking system to ensure that the entire system is properly balanced and that all brakes are functioning properly. Check the individual brake drums for the existence of martensite, bluing, drum distortion, or an out-of-round drum. Other causes may include oversized drums, worn or improperly rated linings. Check the drums for grease stains. If grease stains exist, clean the entire assembly, repair the broken or faulty component causing the leak, replace the lining if required and clean the braking surface of the drum.</p>
<p>Driver complains of brakes pulling during application, causing swerving to the left or right.</p>	<p>Pulling to the left or right during brake application can be caused by either unequal braking force (unbalanced braking system) or improperly functioning brake components.</p>	<p>When this problem occurs, the braking system should be checked for one or more of the following causes: The braking system should be checked for balance to make sure that all brakes are functioning equally during the brake application. Check the slack adjusters to make certain that they are functioning properly and that the proper clearance is present between the lining and the braking surface. Individual brakes should be checked for worn or damaged brake linings or other broken or damaged parts. Brake drums should be checked for excessive wear or specific damage to the braking surface. Drums should also be checked for the presence of abrasives or foreign matter in the drum.</p>
<p>Driver complains of excessive noise, chattering, or pulsating during brake application.</p>	<p>These problems can be caused by one or more of the following problems. The existence of bluing, a martensite condition, or grease spotted, polished drums, excessive wear at the rivet holes and/or at the point where the edge of the linings contact the braking surface. Other causes could include out-of-round drums, unbalanced drums, worn or damaged brake parts, or foreign matter on the braking surface.</p>	<p>The brake drums should be removed and checked for the existence of one or more of the problems described. The appropriate corrective action should be taken immediately, depending on the problem found to be the cause.</p>



BULLETIN

IPL

IMPARTIAL PTY LTD

26 Saggart Fields Road, MINTO NSW 2566

www.impartial.com.au

Ph: 02 9755 3333